

Deia™

THE AROUSER

PULSATING EXTERNAL
STIMULATOR

INSTRUCTION MANUAL

POWER BUTTON

Press and hold the power button for 3 seconds to turn on. Press firmly to cycle through the 10 settings. Press and hold for 3 seconds to power off.

 
CHARGING INDICATOR



CHARGING NODES


Attach the magnetic charging cable to the magnetic charging nodes on the device. Plug the other end into a 5V power source (standard mobile phone charger).

HOW TO CHARGE

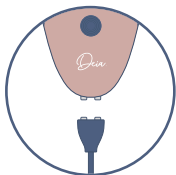


STEP 1:

 Locate the two charging nodes on the charging cable and the charging nodes on the device (two small metal circles located on the bottom of the device).

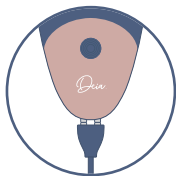

STEP 2:

 Line up the two charging nodes on the charging cord with the charging nodes on the product. The cord and product should magnetically attach.

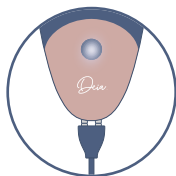

STEP 3:

 
Plug the other end of the charging cable into a 5V power source (standard mobile phone charger). The LED light on the device will pulsate slowly to indicate charging and turn solid when fully charged.

WAYS TO USE



WARM UP

Use the arouser to caress your or your partner's breasts, focusing on the nipples to increase arousal.

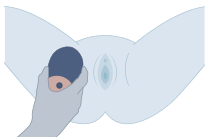

EXPERIMENT

Gently run the arouser up your or your partner's thighs, slowly working your way up to the inner thigh until you reach the outer labia.



GET THERE

Firmly press the arouser's pulsing oval pad against your or your partner's clitoris for the most intense sensation of all.

CLEANING:

Be sure to clean thoroughly before and after each use. Clean using mild soap and warm water.

STORAGE:

Store in a cool, dry place separately from other sexual wellness devices; devices of different material can damage each other if left in contact.

QUALITY:

This product is manufactured using body-safe silicone that is harmless to the human body; free from phthalates, BPA and latex. Use water-based lubricant only.

CHARGING:

Do not turn on while charging and/or cleaning. While charging, the LED light on the device will pulsate slowly and turn solid when fully charged. Use only with 5-volt USB wall adapter (standard mobile phone charger).

Low battery alert: Light on device flashes rapidly when battery is running low. Allow 120 minutes for a full charge. Total usage time from full battery on highest setting is 50 minutes.

WARNINGS:

Discontinue use if there is any discomfort for you or your partner. Do not expose device to water while charging.

WATERPROOF:

The arouser is waterproof to IPX7 standards and can be submerged in the bath or shower.



Deia™

For more information:
Visit deialove.com