

LELO



INA™ 3

USER MANUAL

Intense, all-encompassing pleasure
should never be taken for granted.

Use it wisely, often and with care.


Congratulations on acquiring INA 3. Before getting more closely acquainted with it, please take a moment to look through this user manual.

IMPORTANT: Your pleasure object has been locked for transportation. To unlock, simply connect the charger or see below.

GETTING STARTED

- Before first use, charge your INA 3 for 2 hours.
- Unlock by pressing and holding the + and – buttons simultaneously for 3 seconds until the light turns on.
- Press + button to turn on; press again to increase the vibration strength.
- Press ▲ / ▼ buttons to switch between the 10 vibration patterns.
- Press – button to reduce vibration strength.
- Press and hold – button to turn off.

GETTING TO KNOW YOUR INA 3

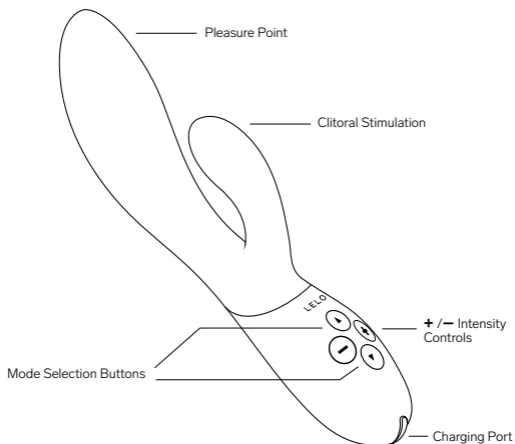

HOLDING YOUR INA 3




Tip: For the most pleasurable sensation, apply a liberal amount of LELO Personal Moisturizer to your body and to INA 3 before and during use.



CHARGING YOUR INA 3

- Insert the DC plug into the DC port at the bottom of your INA 3.
- The LED on the interface of your INA 3 will pulse to indicate it is charging.
- When it is fully charged (after c. 2 hours), the LED will emit a steady glow.
- When the battery is running low, the LED on your INA 3 will emit a blinking red light.

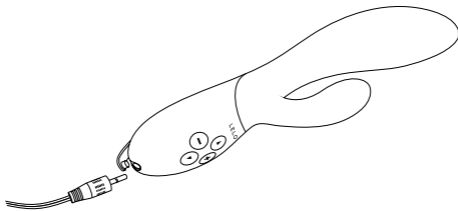

Only use original chargers provided by LELO with your INA 3.

CLEANING, STORAGE, AND SAFETY

Using INA 3 with hand creams or silicone-based lubricants may make the silicone permanently tacky.

INA 3 is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow to dry.

Always clean your INA 3 thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water, and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol, or acetone.

Avoid leaving your INA 3 in direct sunlight and NEVER expose it to extreme heat. Store your INA 3 in a dust-free place and keep it away from products of other materials.

IMPORTANT: Children shall not play with the appliance. For adult use only. Those who may be pregnant, have a pacemaker, diabetes, phlebitis, thrombosis or any other condition, should consult with a medical professional regarding the risk of blood clots before using any personal massage product.

The appliances must only be supplied at SELV.

TROUBLESHOOTING

The LED on your INA 3 does not pulse when the charger is connected:

- The battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check wall and DC sockets.

Your INA 3 does not activate when the + button is pressed:

- The battery is empty. Recharge your INA 3.
- The interface of your INA 3 is locked. Hold down + and – for 5 seconds.

If you experience any other problems with your INA 3 or if you have any questions regarding operation, please contact: customercare@lelo.com

SPECIFICATIONS

| | |
|------------------------------|---------------------------------------|
| MATERIALS | Body-safe Silicone, ABS |
| BODY COLORS | Coral, Seafoam, Seaweed |
| INTERFACE | 4-button |
| SWITCH OFF | Automatic |
| FREQUENCY | 60Hz |
| BATTERY | Li-Ion 520mAh 3.7V |
| CHARGE TIME | 2 hours at 5.0V 500mA |
| USER TIME | Up to 2 hours |
| STANDBY TIME | Up to 90 days |
| SIZE | 200 x 65 x 45 mm / 7.9 x 2.5 x 1.7 in |
| INSERTABLE LENGTH | 110 mm / 4.3 in |
| WEIGHT (ONLY PRODUCT) | 150 g / 0.33 lb |

REGISTER WARRANTY

To activate your 1-Year Limited Warranty, register the number provided on the LELO Authenticity Card at [LELO.COM/SUPPORT](https://www.lelo.com/support)

1-YEAR WARRANTY

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence of the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period.

To claim your warranty, you must log in to your account at [LELO.COM](https://www.lelo.com) then select the option to make a warranty claim. Shipping costs are non-refundable. This undertaking is in addition to the consumer's statutory rights and does not affect those rights in any way.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for the recycling of electrical and electronic equipment.



Disclaimer: Users of this product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Model may be changed for improvements without notice.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF exposure statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

© 2021 LELOi AB. ALL RIGHTS RESERVED.
DESIGNED AND DEVELOPED BY LELO SWEDEN.
MANUFACTURED FOR LELO IN CHINA.

WEBSITE: WWW.LELO.COM

SUPPORT: CUSTOMERCARE@LELO.COM

www.lelo.com